

Motorola WT4090 - 41N0

WT4090-N2H1GER	Wearable terminal 128/128 memory, 2-color keypad, with Hi-Capacity battery, English OS. Wrist mount and scanners not included.
WT4090-N2S0GER	Wearable terminal, 2-color keypad, with standard battery, English OS. Wrist mount and scanners not included.
WT4090-N2S1GER	Wearable terminal 128/128 memory, 2-color keypad, with standard battery, English OS. Wrist mount and scanners not included.
WT4090-N3H0GER	Wearable terminal, 3-tap keypad, with Hi-Capacity battery, English OS. Wrist mount and scanners not included.
WT4090-N3H1GER	Wearable terminal, no touchscreen, 3-tap keypad, 128/128 memory, with Hi-capacity battery, English OS. Wrist mount and scanners not included.
WT4090-N3S0GER	Wearable terminal, 3-tap keypad, with standard battery, English OS. Wrist mount and scanners not included.
WT4090-N3S1GER	Wearable terminal 128/128 memory, 3-tap keypad, with standard battery, English OS. Wrist mount and scanners not included.
WT4090-T2H1GER	Wearable terminal, touchscreen, 2-color keypad, 128/128 memory, with Hi-Capacity battery, English OS. Wrist mount and scanners not included.
WT4090-T2S1GER	Wearable terminal, touchscreen, 2-color keypad, 128/128 memory, with standard battery, English OS. Wrist mount and scanners not included.
WT4090-V1H1GER	WT4090 Voice Only Wearable (VOW). Has no display and only 3 keys. 128/128 memory and Hi-Capacity battery. Please order mounting softgoods & scanners separately. Works with all WT4090 accessories.
WT41N0-N2H27ER	Wearable terminal has non touch display and double tap keypad. 512/2G memory, a/b/g/n radio, CE7 OS and extended battery. Please order mounting softgoods & scanners separately. Works with all Wearable accessories.
WT41N0-N2S27ER	Wearable terminal has non touch display and double tap keypad. 512/2G memory, a/b/g/n radio, CE7 OS, English, and standard battery. Please order mounting softgoods & scanners separately. Works with all Wearable accessories.
WT41N0-T2H27ER	Wearable terminal has touch display and double tap keypad. 512/2G memory, a/b/g/n radio, CE7 OS and extended battery. Please order mounting softgoods & scanners separately. Works with all Wearable accessories.
WT41N0-T2S27ER	Wearable terminal has touch display and double tap keypad. 512/2G memory, a/b/g/n radio, CE7 OS, English and standard battery. Please order mounting softgoods & scanners separately. Works with all Wearable accessories.
WT41N0-V1H27ER	WT41N0 Voice Only Wearable (VOW). Has no display and only 3 keys. 512/2G memory and extended battery. Please order mounting softgoods & scanners separately. Works with all Wearable accessories.
Motorola WT 4090 Accessories	
CRD4000-111UES	Energy Star Single-Slot Cradle International Kit: includes cradle (CRD4000-1000UR), PS (PWRS-14000-148R), and USB cable (25-68596-01R)
25-68596-01R	USB Client Communication Cable for Cradle to the host system.
RS409-SR2000ZZR	Ring Scanner, 1D laser, cabled to wrist-mounted terminal
SG-WT4015231-01R	RS409 replacement trigger assy (qty 1)
BTRY-WT40IAB0E	Battery, Lithium Ion, for WT40x0 terminal (spare)
SCB-WT4090-10	1 Year Service Center Bronze. Does not include Comprehensive Coverage. Does not include coverage for Ring Scanner or cradle.

SSB-WT4090-30	3 Year Service from the Start Service Center Bronze. Includes Comprehensive Coverage. Does not include coverage for Ring Scanner or cradle.
RS419-HP2000FLR	Ring scanner to cable to waist-worn WT4X90 and WT41N0, with HP engine
RS419-HP2000FSR	Ring scanner to cable to arm-worn WT4X90 and WT41N0, with HP engine a

and freezer rating
nd freezer rating